


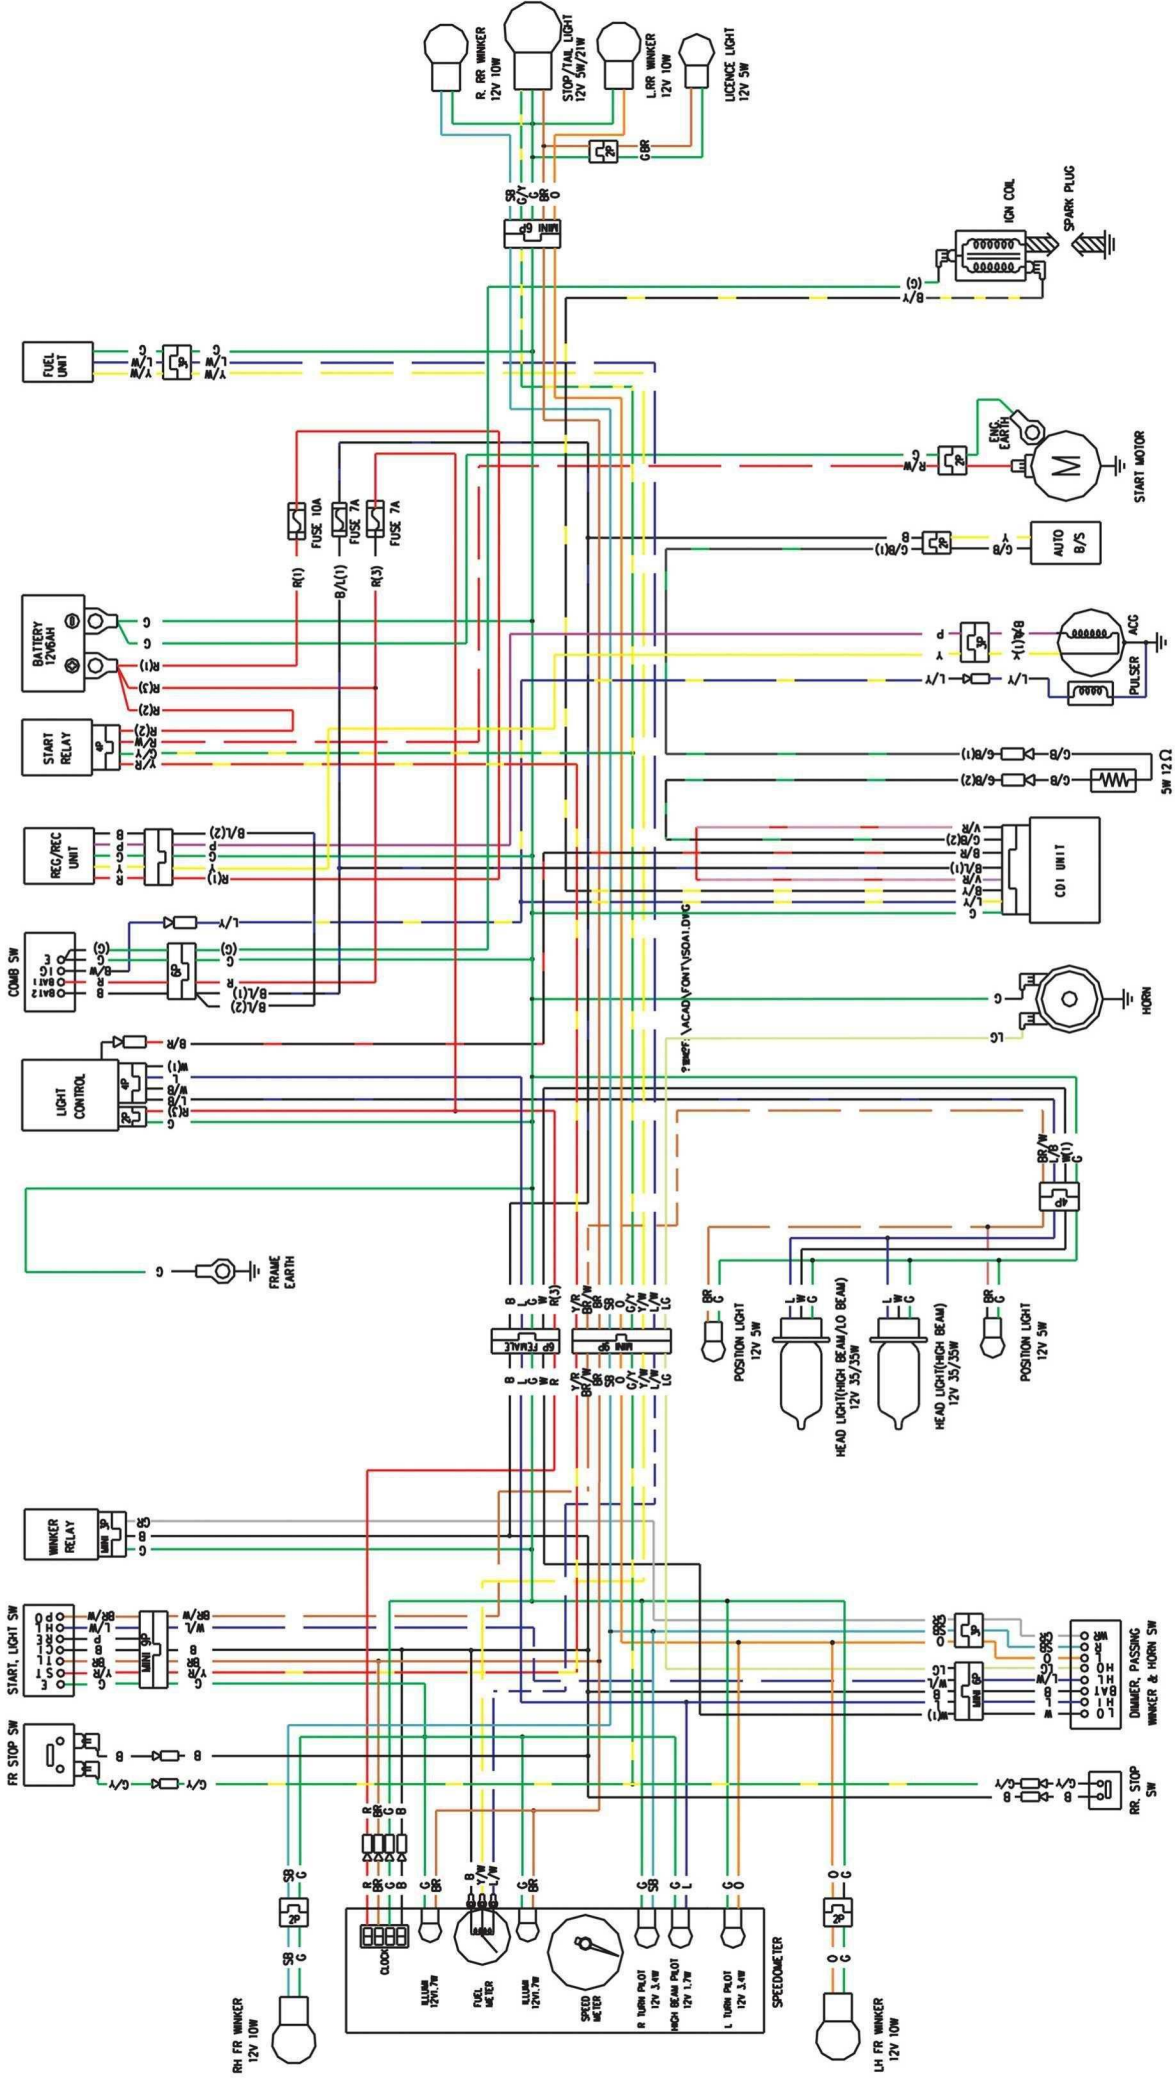

KYMCO

AGILITY RS 50 WIRING DIAGRAM



LIGHTING SW			
C	RE	TL	HL
OFF	ON	ON	ON
	P	ON	ON
	N	ON	ON
	H	ON	ON
COLOR	B	ON	ON
	BR	L/W	BR/W

START SW		
ST	E	
FREE	PUSH	ON
COLOR	Y/R	G

PASSING SW		
HI	BAT	
PASS		ON
COLOR	L	B

HORN SW		
HO	BAT	
FREE	PUSH	ON
COLOR	LC	B

COMB SW			
BATT	IG	E	BATZ
LOCK	OFF	ON	ON
COLOR	R	B/W	G

WINKER SW			
R	L	WR	
L	N	ON	ON
R	R	ON	ON
COLOR	SB	O	GR

DIMMER SW			
HL	HL	LO	
LO	N	ON	ON
HI	ON	ON	ON
COLOR	B	L	W