

K-XCT 300 ABS Wiring Diagram

FUSE A: 15A (WINKER,FR/RR STOP, HORN, METER, STARTER, POSITION, PHONE)
 FUSE B: 15A (IGNITION, IGN COIL, FUEL PUMP, ANGLE DETECTOR SENSOR, FAN MOTOR)
 FUSE C: 25A (ABS ECU)
 FUSE D: 30A (CHARGING)
 FUSE E: 15A (HEAD LIGHT, COIL)
 FUSE F: 40A (ABS MOTOR)

